

VW T-Cross 2018-

ClimAir
car comfort

Part Number: 10075s-a

Date: 15-01-2020

PLAVA Kunststoffe GmbH
Am Spitzacker 22 - 61184 Karben

Sheet 1 of 4

© Copyright Windesa GmbH


GB Car darkening set doors Installation Instruction	N Bilvinduet missfarging dører Installasjonsveiledning
D Autoscheibenverdunklung Türen Einbauanleitung	S Bilrutan nyanserings dörrar Monteringsanvisning
E Ventana de coche puertas de tintado Instrucciones de instalación	SF Auton ikkunasta sävytystä ovet Asennusohjeet
F Portes teinter fenêtre de voiture Instructions d'installation	CZ Okno auto tónování dveře Pokyny k instalaci
I Finestrino della macchina porte colorazione Istruzioni per l'installazione	H Autó Ablakszínezés ajtók Szerelési útmutató
P Portas tintométrico janelas do carro Instruções de instalação	PL Drzwi okienne samochod barwiących Instrukcje instalacji
NL Auto raam verven deuren Installatie-instructies	GR Παράθυρο του αυτοκινήτου πόρτες χρωματισμού Οδηγίες εγκατάστασης
DK Bil vindue toning døre Monteringsvejledning	RUS Окрасивание двери окна автомобиля Инструкция по монтажу





2x



6x

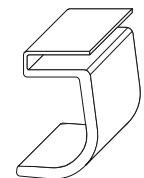

SC3-40

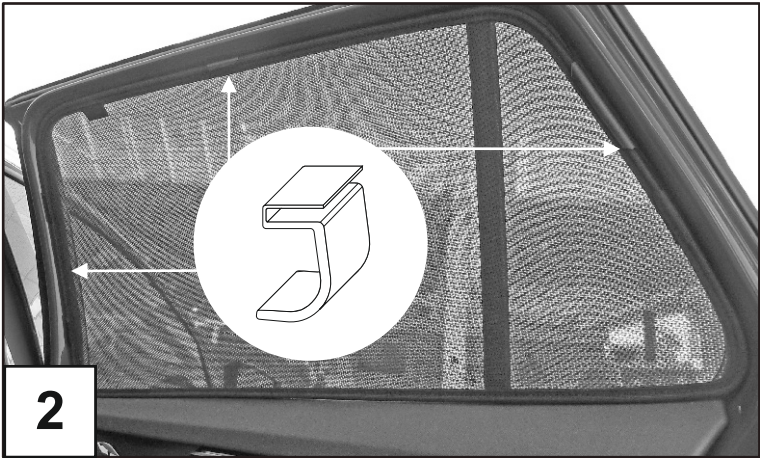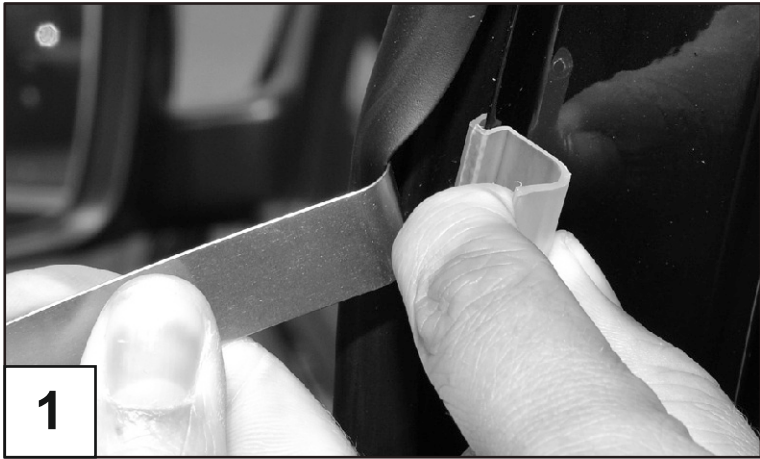

VW T-Cross 2018-

ClimAir
Car Comfort

Part Number: 10075s-a

Date: 15-01-2020

PLAVA Kunststoffe GmbH
Am Spitzacker 22 - 61184 Karben

Sheet 1 of 4

© Copyright Windesa GmbH

GB Car darkening set rear window Installation Instruction	N Bilvinduet vindu missfarging bak Installasjonsveiledning
D Autoscheibenverdunklung Heckfenster Einbauanleitung	S Bilfönstret nyanser bakruta Monteringsanvisning
E Teñido de ventana trasera ventanilla del coche Instrucciones de instalación	SF Auton ikkuna sävytystä takalasin Asennusohjeet
F Fenêtre arrière teinter fenêtre de voiture Instructions d'installation	CZ Okno auto okno tónování zadních Pokyny k instalaci
I Finestra colorazione lunotto auto Istruzioni per l'installazione	H Autó Ablakszínezés hátsó ablak Szerelési útmutató
P Tingimento de janela traseira janela do carro Instruções de instalação	PL Okna samochodu tylnie okno barwienia Instrukcje instalacji
NL Autoruit raam verven achter Installatie-instructies	GR Παράθυρο του αυτοκινήτου φιμέ τζάμια πίσω Οδηγίες εγκατάστασης
DK Vindue toning bageste bil vindue Monteringsvejledning	RUS Окна автомобиля тонировка заднего стекла Инструкция по монтажу



1x



2x



SC8-20-7

