



Kia Ceed III SW ab 2018



Part Number: 10029s-a

Date: 25-11-2019

PLAVA Kunststoffe GmbH
Am Spitzacker 22 - 61184 Karben


Sheet 1 of 4

© Copyright Windesa GmbH

GB Car darkening set doors Installation Instruction	N Bilvinduet missfarging dører Installasjonsveiledning
D Autoscheibenverdunklung Türen Einbauanleitung	S Bilrutan nyanserings dörrar Monteringsanvisning
E Ventana de coche puertas de tintado Instrucciones de instalación	SF Auton ikkunasta sävytystä ovet Asennusohjeet
F Portes teinter fenêtre de voiture Instructions d'installation	CZ Okno auto tónování dveře Pokyny k instalaci
I Finestrino della macchina porte colorazione Istruzioni per l'installazione	H Autó Ablakszinezés ajtók Szerelési útmutató
P Portas tintométrico janelas do carro Instruções de instalação	PL Drzwi okienne samochodów barwiących Instrukcje instalacji
NL Auto raam verven deuren Installatie-instructies	GR Παράθυρο του αυτοκινήτου πόρτες χρωματισμού Οδηγίες εγκατάστασης
DK Bil vindue toning døre Monteringsvejledning	RUS Окрашивание двери окна автомобиля Инструкция по монтажу



2 x

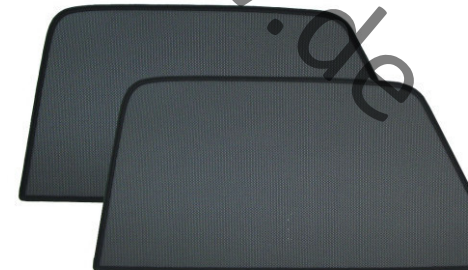

2x




SC4-40

2x



SC8-20

4x



SC6-40



Kia Ceed III SW ab 2018



Part Number: 10029s-b

Date: 25-11-2019

Sheet 1 of 4


© Copyright Windesa GmbH

PLAVA Kunststoffe GmbH
Am Spitzacker 22 - 61184 Karben

GB Car darkening set side windows Installation Instruction	N Missfarging sidevindu bilvindu Installasjonsveiledning
D Autoscheibenverdunklung Seitenfenster Einbauanleitung	S Nyanseringssidor bilfönster Monteringsanvisning
E Ventana lateral teñidos de ventana de coche Instrucciones de instalación	SF Auton ikkuna sävytystä sivuikkunan Asennusohjeet
F Portes teinter fenêtre de voiture Instructions d'installation	CZ Okno auto okno tónování side Pokyny k instalaci
I Finestra laterale colorazione della finestra di automobile Istruzioni per l'installazione	H Autó Ablakszínezés oldalablak Szerelési útmutató
P Janela lateral tintométrico janela do carro Instruções de instalação	PL Okno boczne okno barwienia samochod Instrukcje instalacji
NL Auto raam verven zijruit Installatie-instructies	GR Παράθυρο πλευρά χρωματισμού παράθυρο αυτοκινήτου Οδηγίες εγκατάστασης
DK Bil vindue vindue toning side Monteringsvejledning	RUS Сторона тонировка стекла Автостекло Инструкция по монтажу





2x

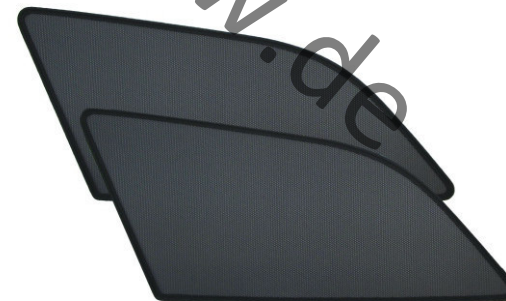

2x



SC8-20

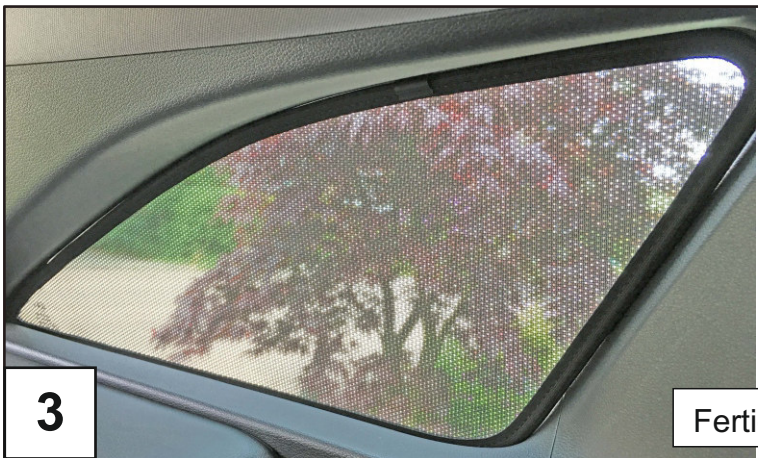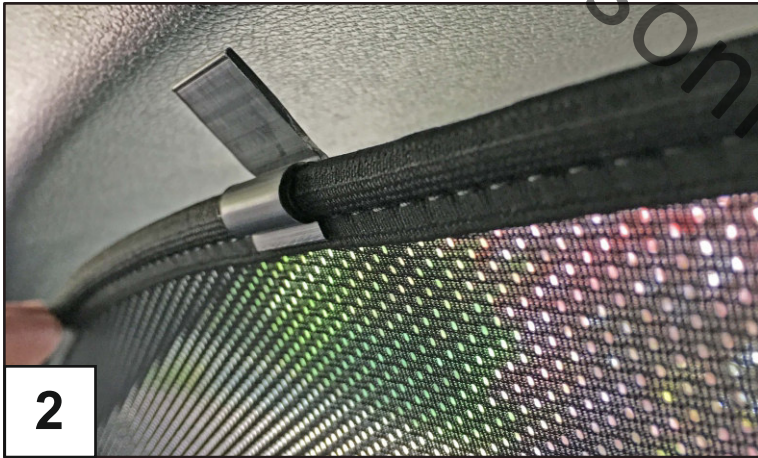

Fertig ✓

www.sonenschutz-pkw.de



Kia Ceed III SW ab 2018



Part Number: 10029s-c

Date: 25-11-2019

PLAVA Kunststoffe GmbH
Am Spitzacker 22 - 61184 Karben

Sheet 1 of 4

© Copyright Windesa GmbH


- | | |
|---|--|
| GB Car darkening set rear window
Installation Instruction | N Bilvinduet vindu missfarging bak
Installasjonsveiledning |
| D Autoscheibenverdunklung Heckfenster
Einbauanleitung | S Bilfönstret nyanser bakruta
Monteringsanvisning |
| E Teñido de ventana trasera ventanilla del coche
Instrucciones de instalación | SF Auton ikkuna sävytystä takalasin
Asennusohjeet |
| F Fenêtre arrière teintée fenêtre de voiture
Instructions d'installation | CZ Okno auto okno tónování zadních
Pokyny k instalaci |
| I Finestra colorazione lunotto auto
Istruzioni per l'installazione | H Autó Ablakszínezés hátsó ablak
Szerelési útmutató |
| P Tingimento de janela traseira janela do carro
Instruções de instalação | PL Okna samochodu tylnie okno barwienia
Instrukcje instalacji |
| NL Autoruit raam verven achter
Installatie-instructies | GR Παράθυρο του αυτοκινήτου φιμέ τζάμια πίσω
Οδηγίες εγκατάστασης |
| DK Vindue toning bageste bil vindue
Monteringsvejledning | RUS Окна автомобиля тонировка заднего стекла
Инструкция по монтажу |



1x



1x

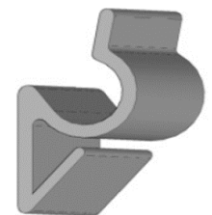

SC9-20

