

MONTAGEANLEITUNG

sun-10229abc · Audi Q5 (FY) Sportback 2020- SunClip Auto Sonnenschutz



DE: Montageanleitung

MT: Istruzzjonijiet għall-assemblaġġ

EN: Installation instructions

NL: Montagehandleiding

DK: Installationsvejledning til

PL: Instrukcje montażu

EE: Paigaldusjuhised

PT: Instruções de montagem

FI: Paigaldusjuhised

RO: Instrucțiuni de asamblare

FR: Instructions de montage

SE: Monteringsanvisningar

GR: Οδηγίες συναρμολόγησης

SK: Návod na montáž

IE: Treoracha tionóil

SI: Navodila za sestavljanje

IT: Istruzioni di montaggio

ES: Instrucciones de montaje

HR: Összeszerelési útmutató


CZ: Návod k montáži

LV: Montāžas instrukcija

HU: Összeszerelési útmutató

LT: Surinkimo instrukcijos


BG: Инструкции за сглобяване

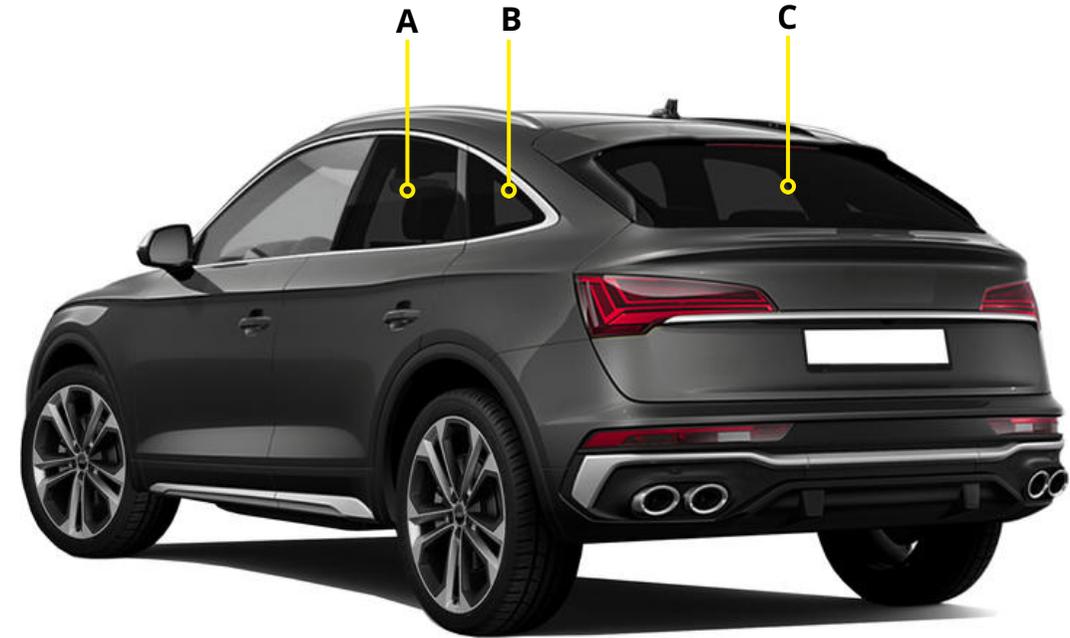

2x A



8x KC1




2x B




1x C



2x SC7-20





1x

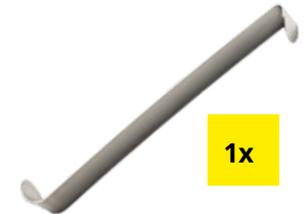




MONTAGEANLEITUNG

sun-10229abc · Audi Q5 (FY) Sportback 2020-

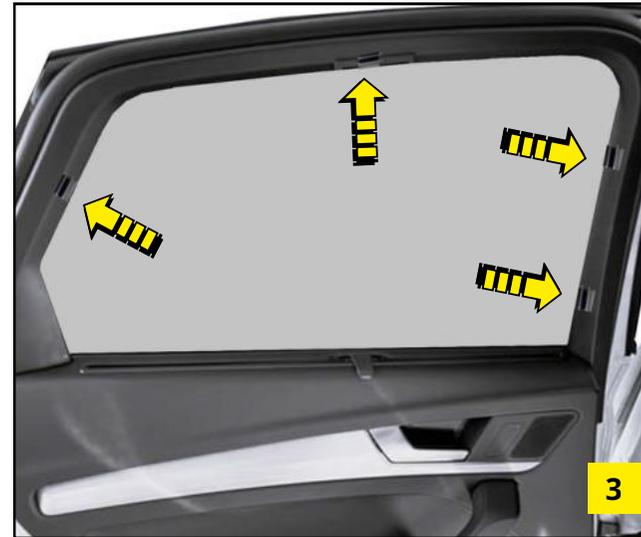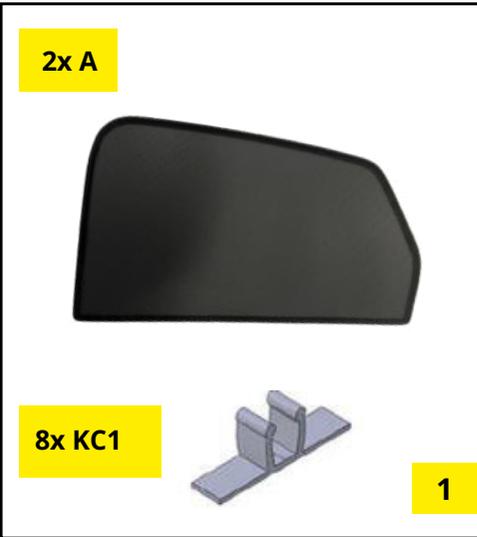

MONTAGEANLEITUNG

sun-10229abc · Audi Q5 (FY) Sportback 2020-

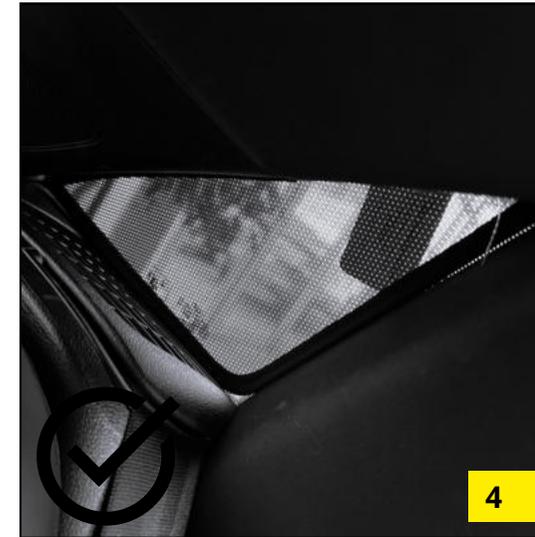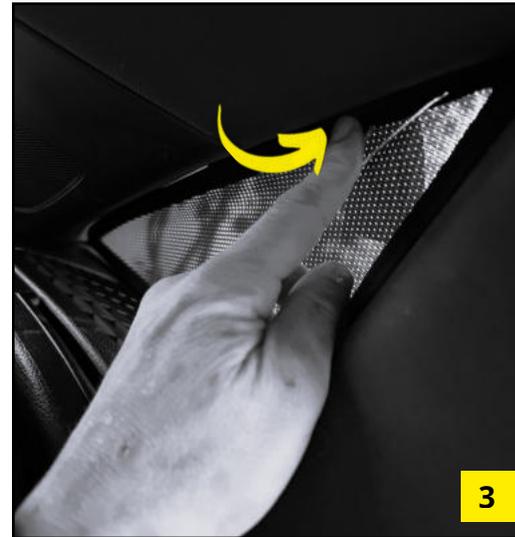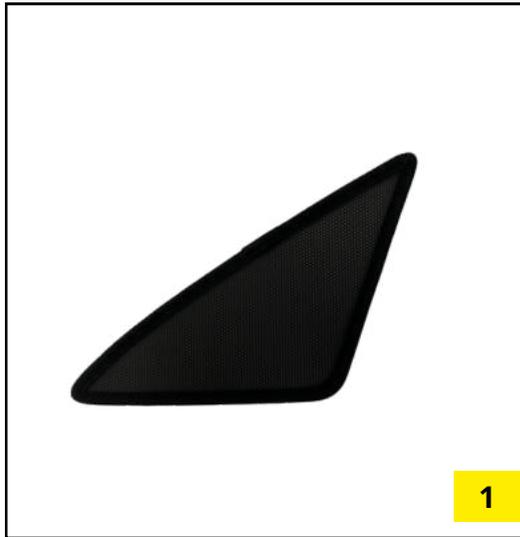

MONTAGEANLEITUNG

sun-10229abc · Audi Q5 (FY) Sportback 2020-

