

MONTAGEANLEITUNG

sun-10375abc · Volvo XC90 2015-

DE: Montageanleitung

MT: Istruzioni per l'installazione

EN: Installation instructions

NL: Montagehandleiding

DK: Installationsvejledning til

PL: Instrukcja montażu

EE: Paigaldusjuhised

PT: Instruções de montagem

FI: Paigaldusjuhised

RO: Instrucțiuni de asamblare

FR: Instructions de montage

SE: Monteringsanvisningar

GR: Οδηγίες συναρμολόγησης

SK: Návod na montáž

IE: Treoracha tionóil

SI: Navodila za sestavljanje

IT: Istruzioni di montaggio

ES: Instrucciones de montaje

HR: Összeszerelési útmutató


CZ: Návod k montáži

LV: Montāžas instrukcija

HU: Összeszerelési útmutató

LT: Surinkimo instrukcijos

BG: Инструкции за сглобяване

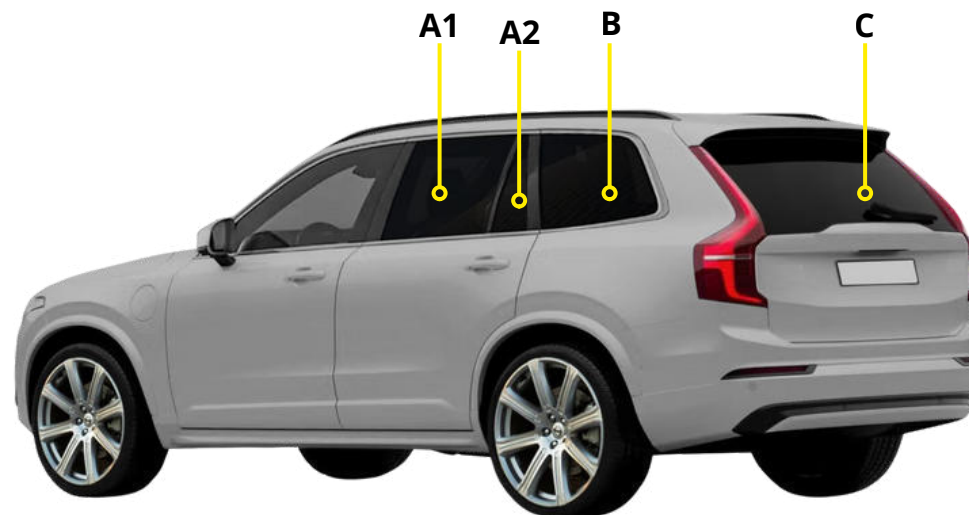


2x A1

2x A2

2x B


1x C

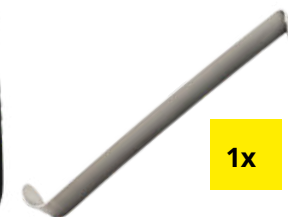

8x SC27






2x SC8-20



2x SC9-20

MONTAGEANLEITUNG

sun-10375abc · Volvo XC90 2015-

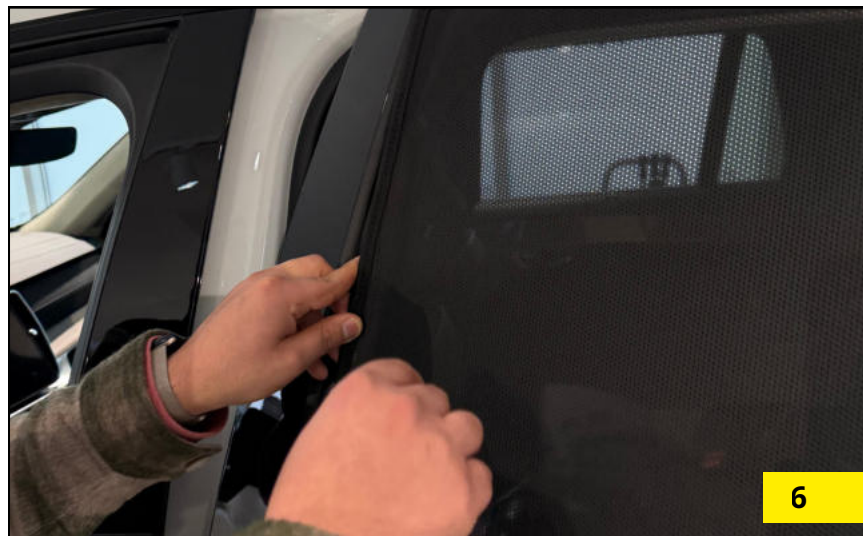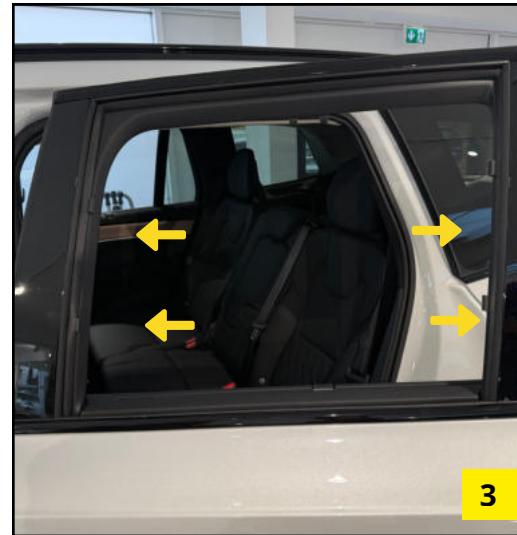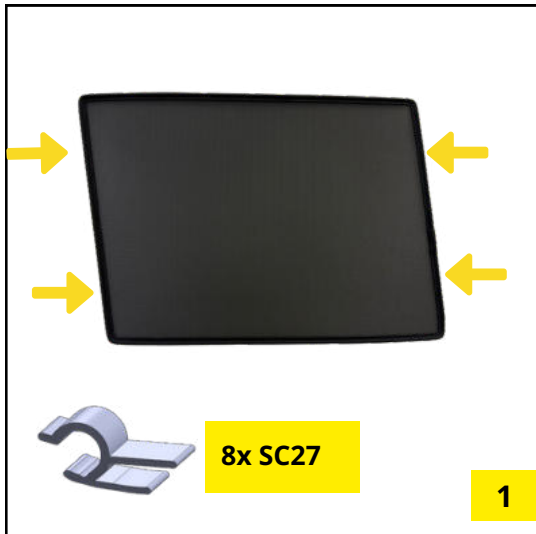

MONTAGEANLEITUNG

sun-10375abc · Volvo XC90 2015-



1



2





3



4

MONTAGEANLEITUNG

sun-10375abc · Volvo XC90 2015-

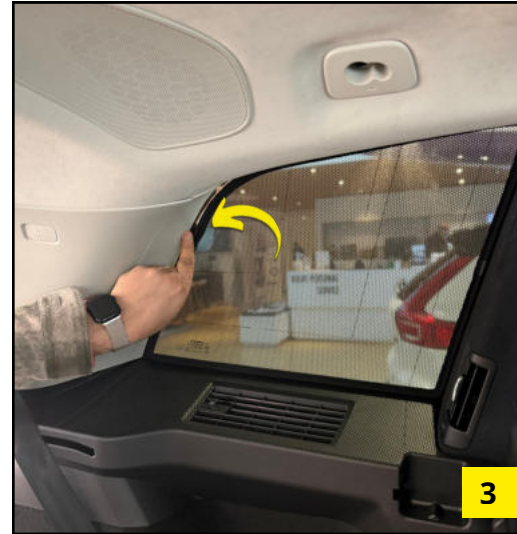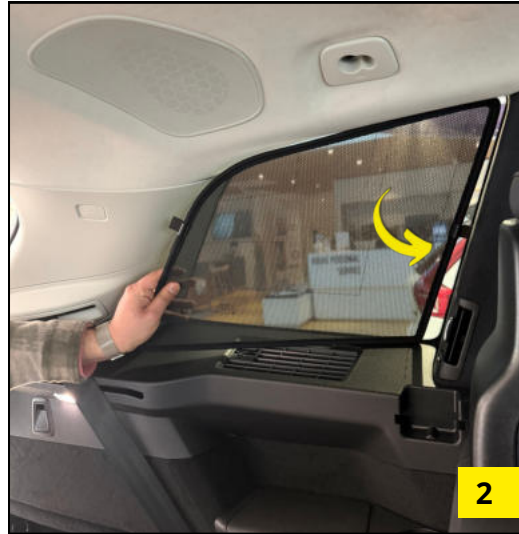

MONTAGEANLEITUNG

sun-10375abc · Volvo XC90 2015-

