

MONTAGEANLEITUNG

sun-10421abc · Mercedes C-Klasse S206 T-Modell 2021-

DE: Montageanleitung

MT: Istruzzjonijiet għall-assemblaġġ

EN: Installation instructions

NL: Montagehandleiding

DK: Installationsvejledning til

PL: Instrukcje montażu

EE: Paigaldusjuhised

PT: Instruções de montagem

FI: Paigaldusjuhised

RO: Instrucțiuni de asamblare

FR: Instructions de montage

SE: Monteringsanvisningar

GR: Οδηγίες συναρμολόγησης

SK: Návod na montáž

IE: Treoracha tionóil

SI: Navodila za sestavljanje

IT: Istruzioni di montaggio

ES: Instrucciones de montaje

HR: Upute za sastavljanje


CZ: Návod k montáži

LV: Montāžas instrukcija

HU: Összeszerelési útmutató

LT: Surinkimo instrukcijos


BG: Инструкции за сглобяване

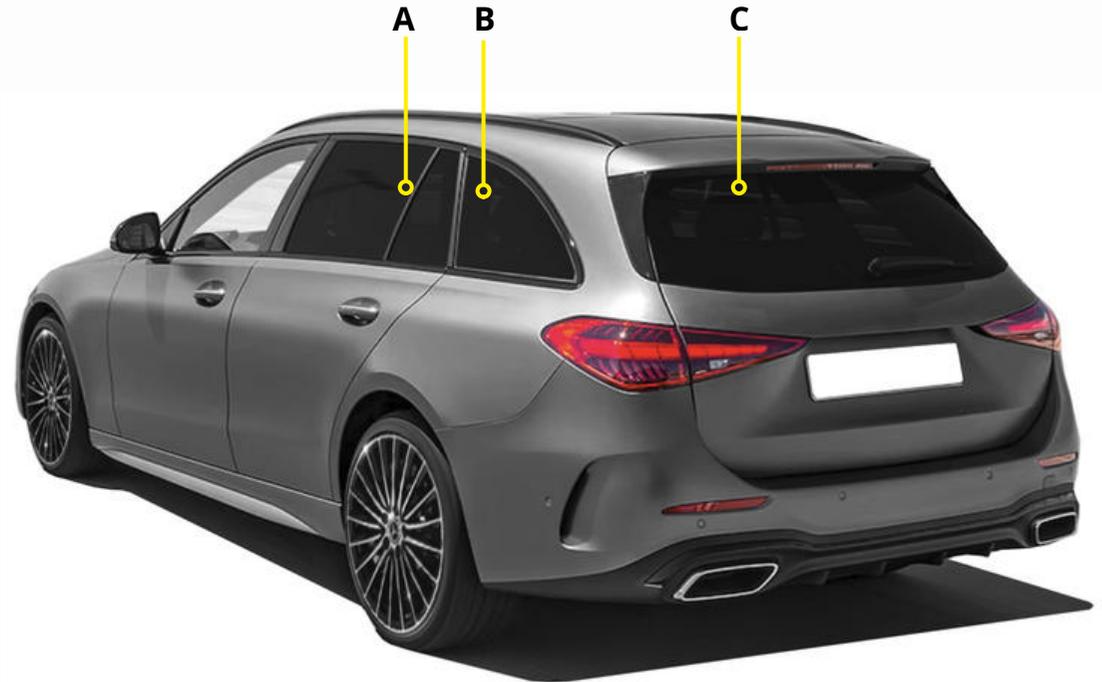

2x A-Blende



8x SC20-20



2x B-Blende



2x SC8-20



1x C-Blende



2x SC9-20




1x





MONTAGEANLEITUNG

sun-10421abc · Mercedes C-Klasse S206 T-Modell 2021-


2x A-Blende

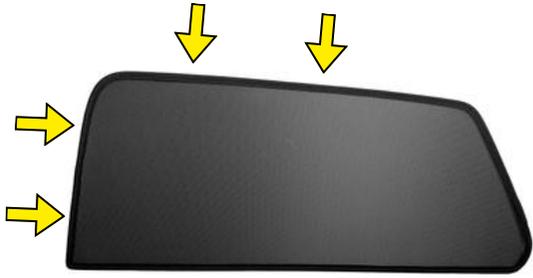

8x SC20-20

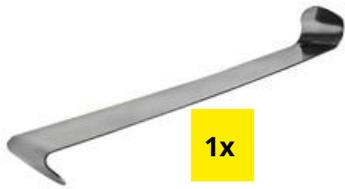


1x

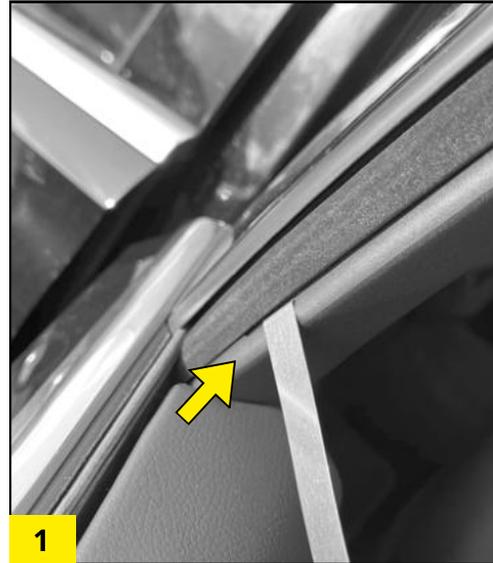

1



2

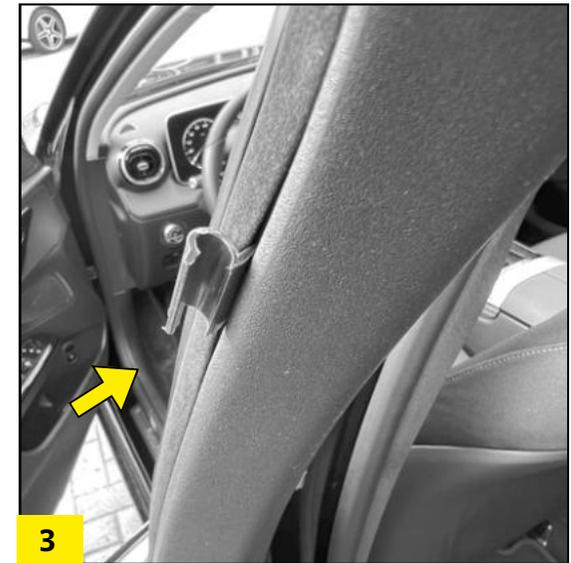

3



4





5

MONTAGEANLEITUNG

sun-10421abc · Mercedes C-Klasse S206 T-Modell 2021-

2x B-Blende

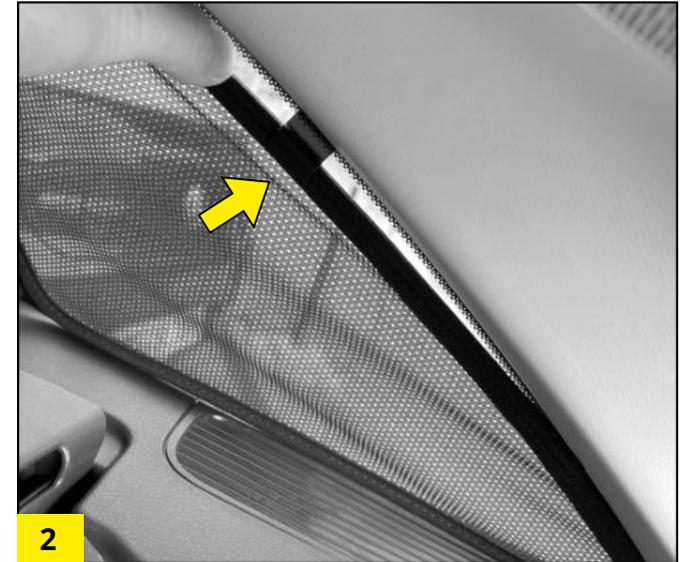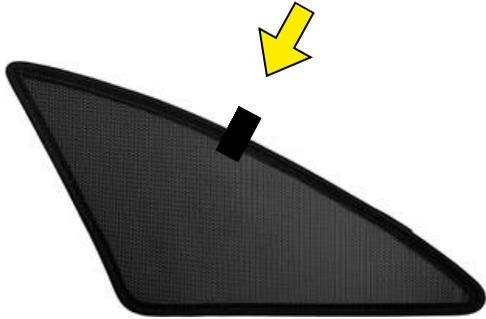


2x SC8-20



MONTAGEANLEITUNG

sun-10421abc · Mercedes C-Klasse S206 T-Modell 2021-

1x C-Blende

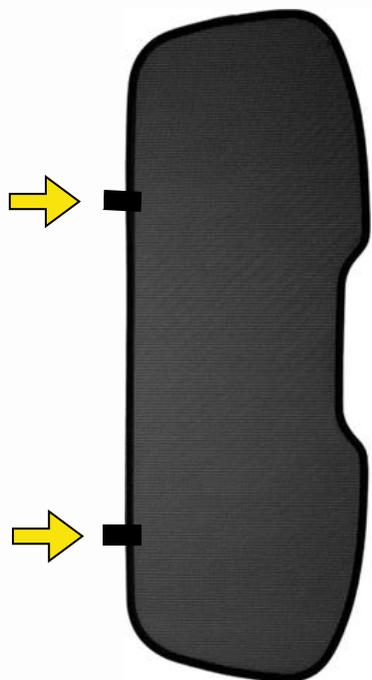

2x SC9-20

