

MONTAGEANLEITUNG

sun-10465ac · VW Golf 6 VI 2008-2012 SunClip Auto Sonnenschutz



DE: Montageanleitung

MT: Istruzzjonijiet għall-assemblaġġ

EN: Installation instructions

NL: Montagehandleiding

DK: Installationsvejledning til

PL: Instrukcje montażu

EE: Paigaldusjuhised

PT: Instruções de montagem

FI: Paigaldusjuhised

RO: Instrucţiuni de asamblare

FR: Instructions de montage

SE: Monteringsanvisningar

GR: Οδηγίες συναρμολόγησης

SK: Návod na montáž

IE: Treoracha tionóil

SI: Navodila za sestavljanje

IT: Istruzioni di montaggio

ES: Instrucciones de montaje

HR: Upute za sastavljanje


CZ: Návod k montáži

LV: Montāžas instrukcija

HU: Összeszerelési útmutató

LT: Surinkimo instrukcijos

BG: Инструкции за сглобяване

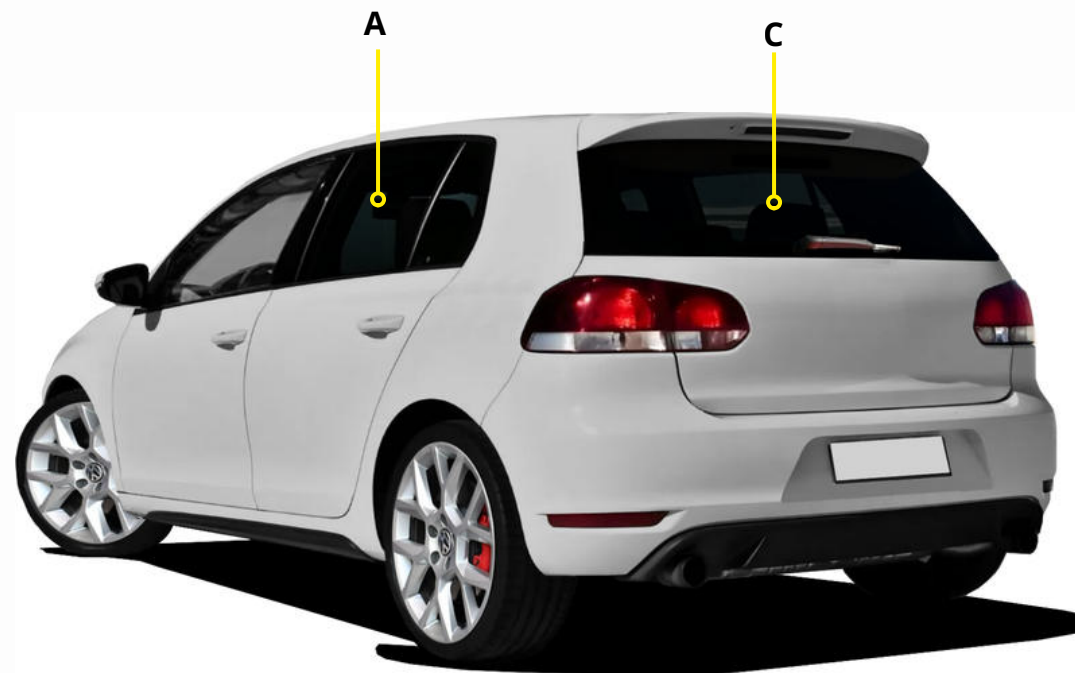

2x A



8x SC3-40



1x C



2x SC9-20






1x



MONTAGEANLEITUNG

sun-10465ac · VW Golf 6 VI 2008-2012 SunClip Auto Sonnenschutz

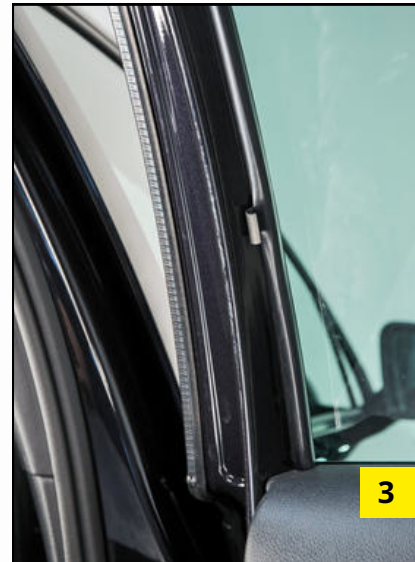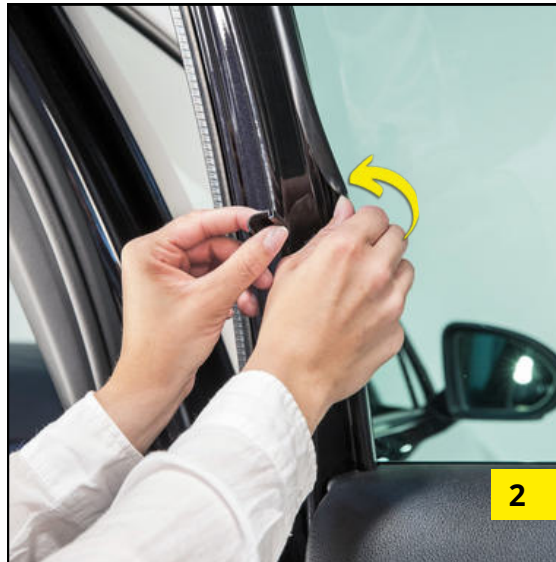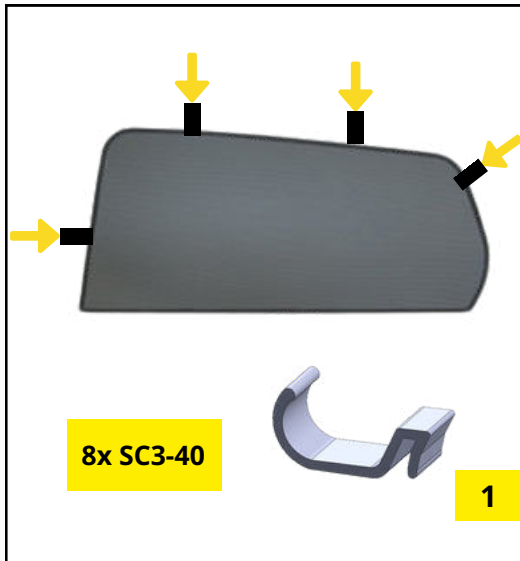

MONTAGEANLEITUNG

sun-10465ac · VW Golf 6 VI 2008-2012 SunClip Auto Sonnenschutz

