

MONTAGEANLEITUNG

sun-10468abc · Audi A6 Avant C7 2011-2018 SunClip Sonnenschutz



DE: Montageanleitung

MT: Istruzzjonijiet għall-assemblaġġ

EN: Installation instructions

NL: Montagehandleiding

DK: Installationsvejledning til

PL: Instrukcje montażu

EE: Paigaldusjuhised

PT: Instruções de montagem

FI: Paigaldusjuhised

RO: Instrucţiuni de asamblare

FR: Instructions de montage

SE: Monteringsanvisningar

GR: Οδηγίες συναρμολόγησης

SK: Návod na montáž

IE: Treoracha tionóil

SI: Navodila za sestavljanje

IT: Istruzioni di montaggio

ES: Instrucciones de montaje

HR: Összeszerelési útmutató


CZ: Návod k montáži

LV: Montāžas instrukcija

HU: Összeszerelési útmutató

LT: Surinkimo instrukcijos

BG: Инструкции за сглобяване

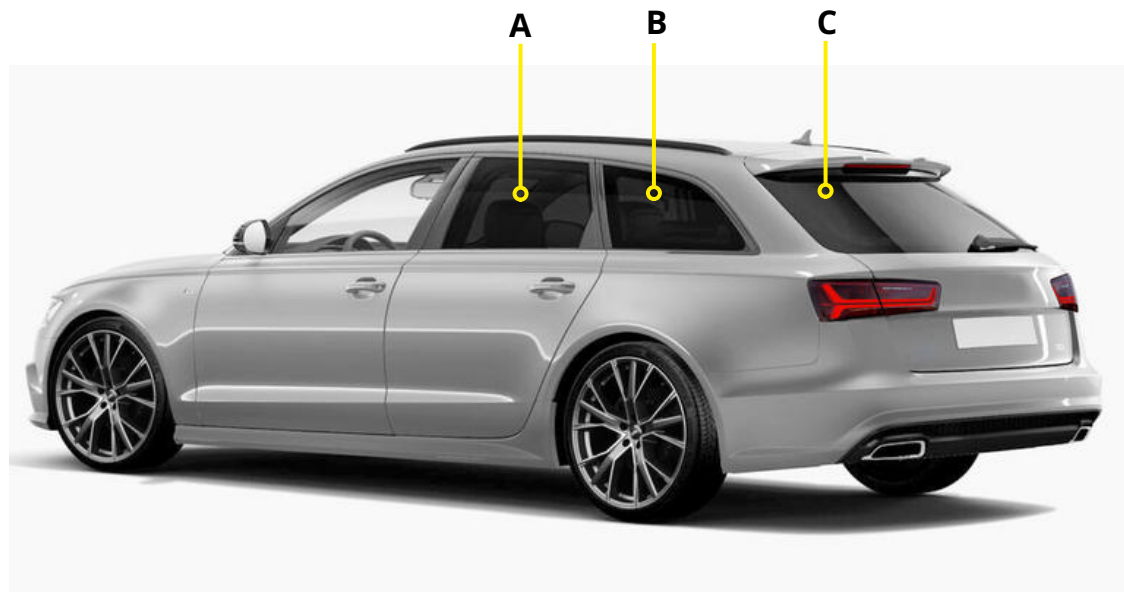

2x A



8x SC1-50



2x B



1x C



2x SC2-50



1x




MONTAGEANLEITUNG

sun-10468abc · Audi A6 Avant C7 2011-2018 SunClip Sonnenschutz

2x A



8x SC1-50

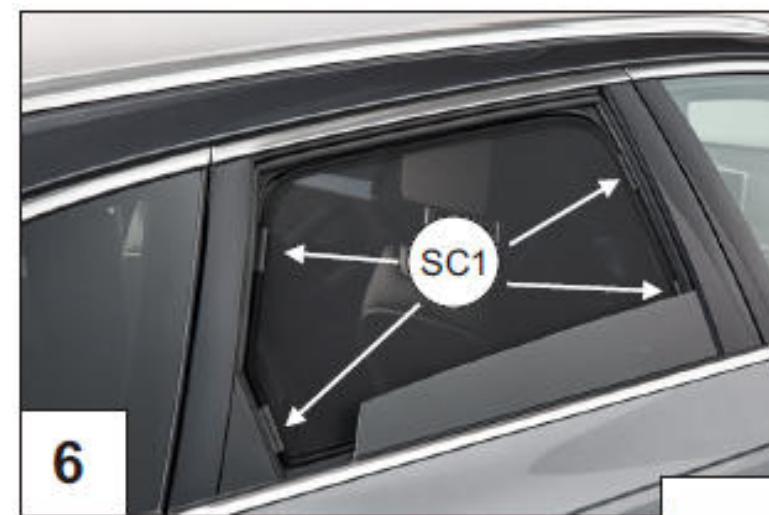

MONTAGEANLEITUNG

sun-10468abc · Audi A6 Avant C7 2011-2018 SunClip Sonnenschutz

2x B



1



2



3



4



5



MONTAGEANLEITUNG

sun-10468abc · Audi A6 Avant C7 2011-2018 SunClip Sonnenschutz



MONTAGEANLEITUNG

sun-10468abc · Audi A6 Avant C7 2011-2018 SunClip Sonnenschutz

