


MONTAGEANLEITUNG

sun-10496abc · BMW X5, 2018- SunClip Sonnenschutz

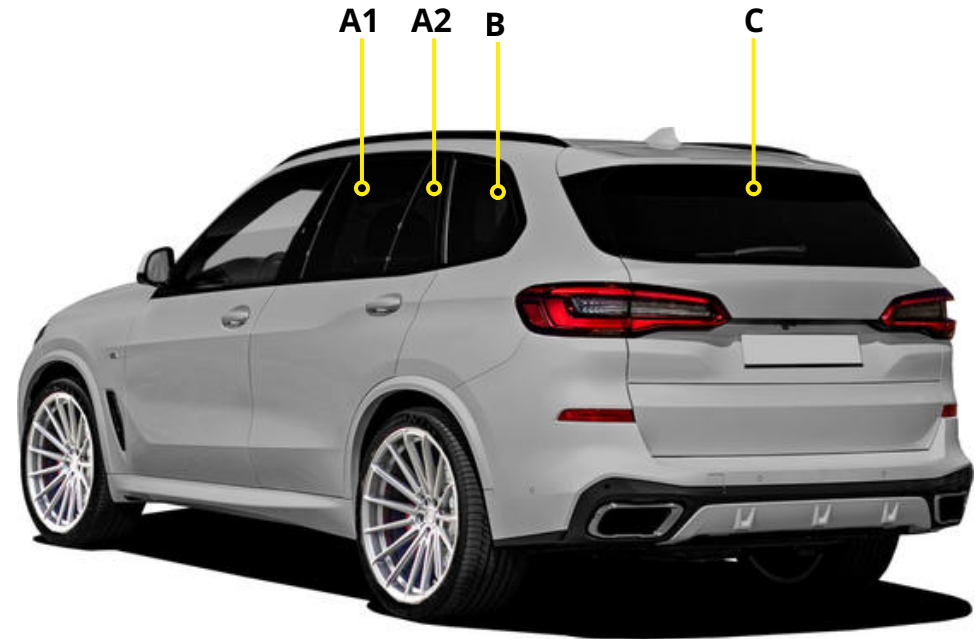

DE: Montageanleitung	MT: Istruzzjonijiet għall-assemblaġġ
EN: Installation instructions	NL: Montagehandleiding
DK: Installationsvejledning til	PL: Instrukcje montażu
EE: Paigaldusjuhised	PT: Instruções de montagem
FI: Paigaldusjuhised	RO: Instrucțiuni de asamblare
FR: Instructions de montage	SE: Monteringsanvisningar
GR: Οδηγίες συναρμολόγησης	SK: Návod na montáž
IE: Treoracha tionóil	SI: Navodila za sestavljanje
IT: Istruzioni di montaggio	ES: Instrucciones de montaje
HR: Upute za sastavljanje	CZ: Návod k montáži
LV: Montāžas instrukcija	HU: Összeszerelési útmutató
LT: Surinkimo instrukcijos	BG: Инструкции за сглобяване



2x A1



8x SC28



2x A2



8x SC12-40



2x B



2x SC8-20




1x C



2x SC8-20







1x

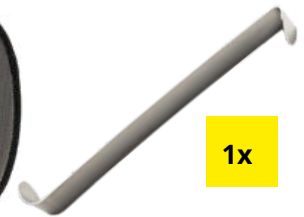




MONTAGEANLEITUNG

sun-10496abc · BMW X5, 2018- SunClip Sonnenschutz

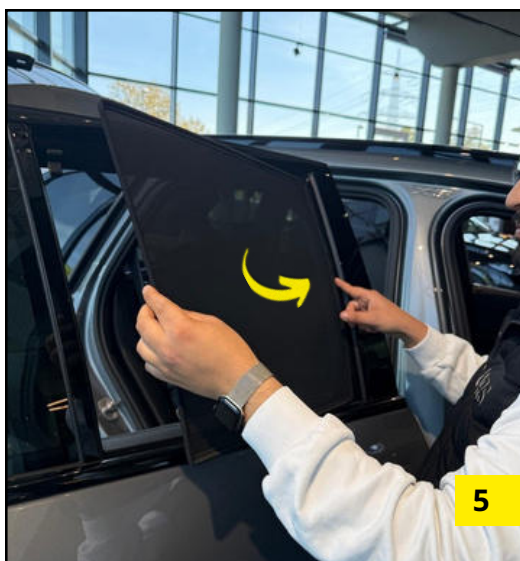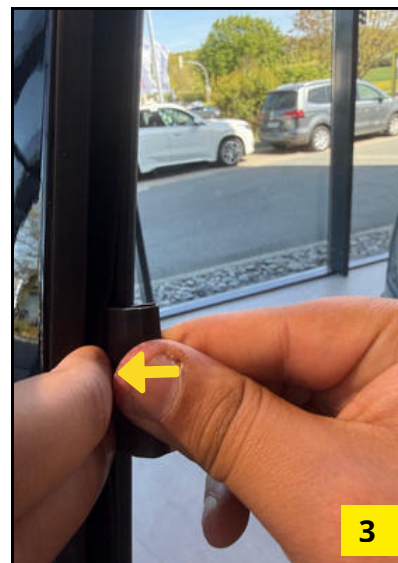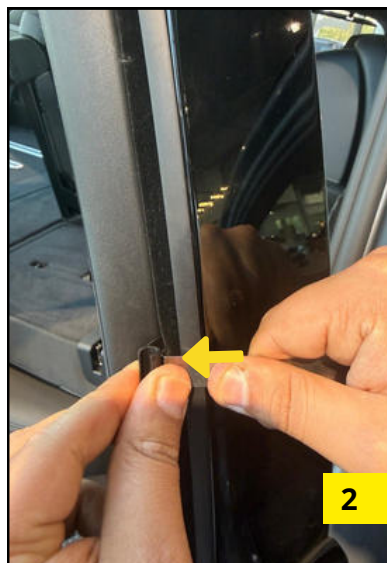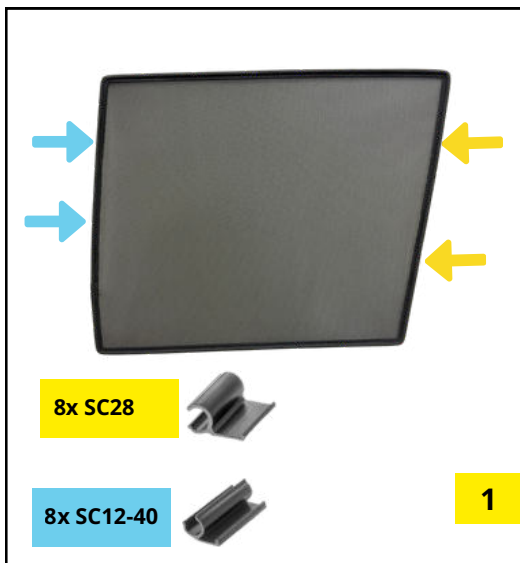

MONTAGEANLEITUNG

sun-10496abc · BMW X5, 2018- SunClip Sonnenschutz

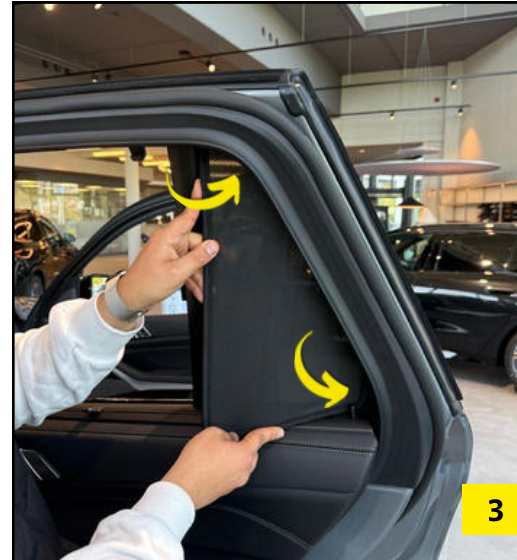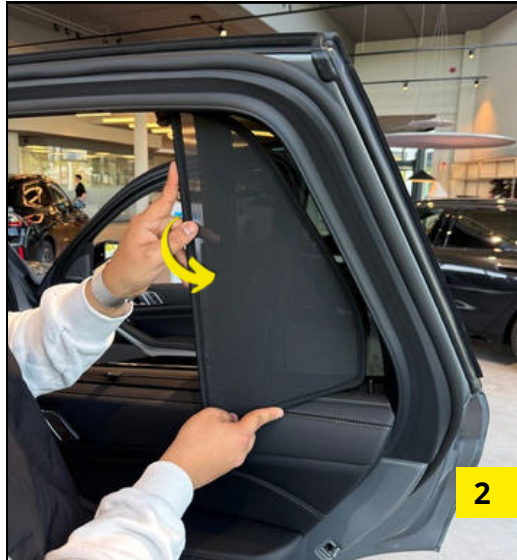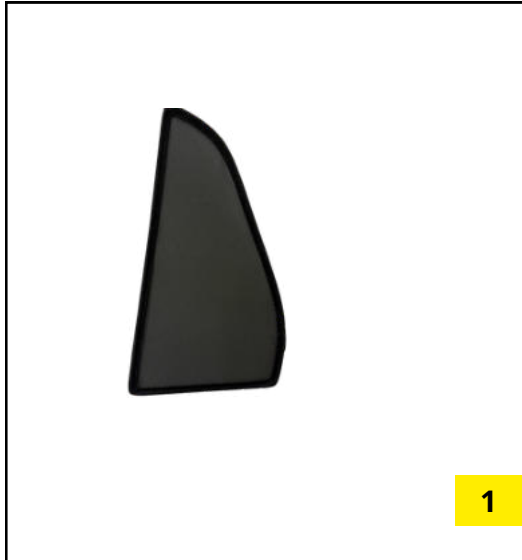

MONTAGEANLEITUNG

sun-10496abc · BMW X5, 2018- SunClip Sonnenschutz



MONTAGEANLEITUNG

sun-10496abc · BMW X5, 2018- SunClip Sonnenschutz

